



Assembly:

- 1) Estimate how many panels you'll need by taking measurements of your cargo area. Each panel measures roughly 12" sq. by 3/4" in height. Stack all panels keeping the male dovetails facing the same way. (figure a.)
- 2) Start assembling the panels outside of your vehicle row by row working left to right keeping the male dovetails facing to the bottom and the left. (figure b.) Assemble FULL ROWS together.
- 3) Working back to front, assemble the full row panels by snapping the entire rows together. Make sure all the panels are completely secure with one another. (figure c.)
- 4) Insert the blockers wherever you needed by lining up the blocker pegs with the panels and inserting with an even pressure. (figure d.)

Disassembly:

- 1) Remove all cargo and blockers as needed.
- 2) Working front to back, remove the panels row by row by applying pressure to the one row of panels while pulling up on another. (figure e.)

Cleaning and Maintenance:

- 1) Clean panels and blockers by hosing off with water, dry with rag

For tips and questions see our website or call the number below

Other tips:

Try to use the cargo area walls as a way to conserve blockers. Secure to plywood for extra strength!

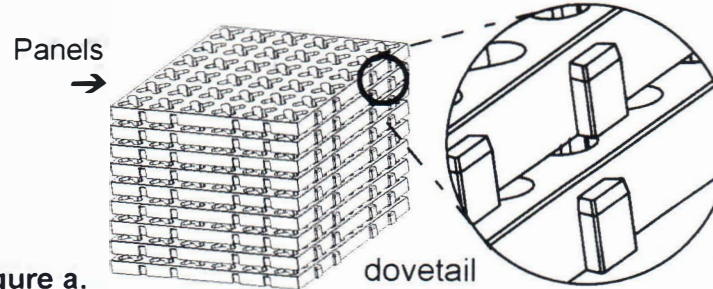


Figure a.

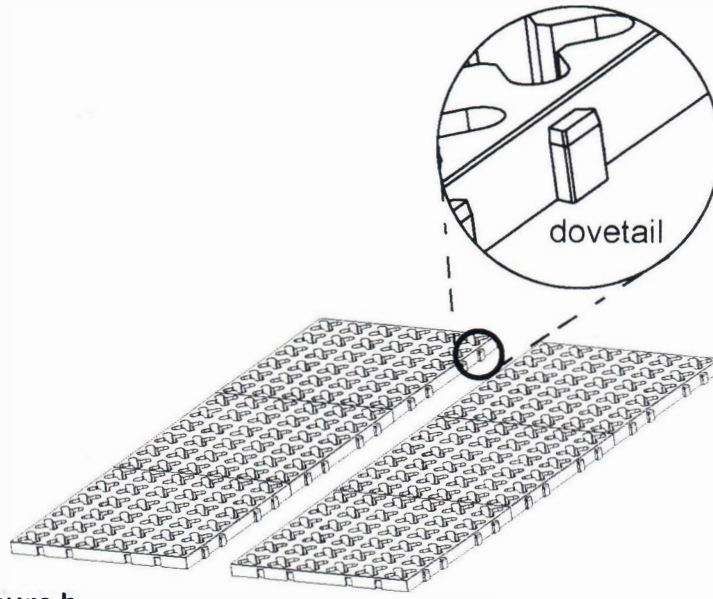


Figure b.

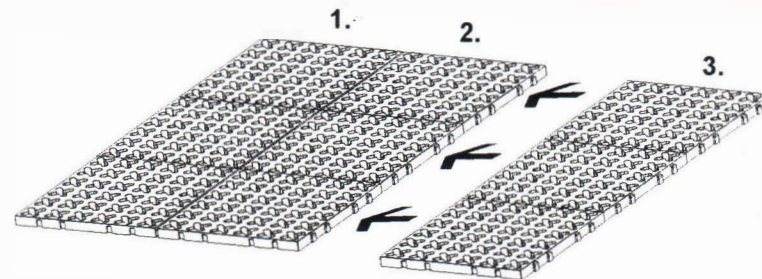


Figure c.

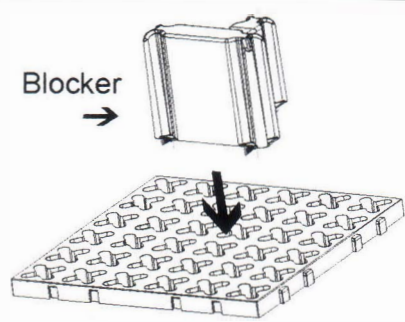


Figure d.

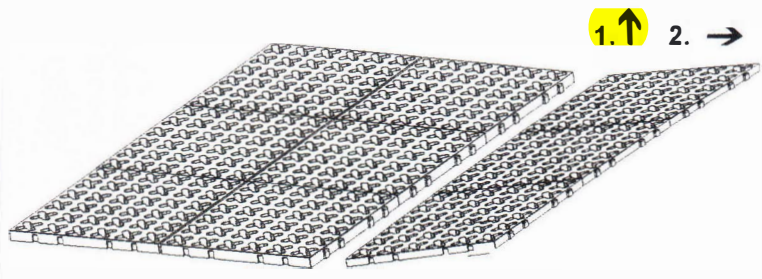


Figure e.

www.tmatproducts.com
440-230-0303
11941 ABBEY ROAD, North Royalton, Ohio 44133